


NOTES:

- 1. THICKNESS OF PCC AND BASE DEPENDS UPON ADT VOLUME AND SOIL TYPE. STRUCTURAL SECTION CALCULATIONS ARE REQUIRED.
- 2. LOCATION OF BUS TURNOUT SHOULD BE AS APPROVED BY THE TRANSPORTATION DEPARTMENT, AND IN CONSULTATION WITH THE APPROPRIATE TRANSIT AGENCY.
- 3. FAR SIDE BUS TURNOUT IS THE PREFERRED LOCATION:

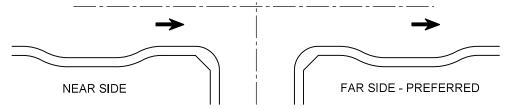

4. WHEN ABUTTING SOIL HAS A HIGH SULFATE CONTENT, USE A MODIFIED CONCRETE MIX AND PLACE 6" MIN CLASS 2 AGGREGATE BASE AND 6 MIL PLASTIC SHEETING UNDER AND AROUND ALL SIDES OF CONCRETE IMPROVEMENTS. FOR EXPANSIVE SOIL, PLACE 6" MIN CLASS 2 AGGREGATE BASE UNDER CONCRETE IMPROVEMENTS AS DIRECTED BY THE ENGINEER. SEE SPECIFICATIONS SECTIONS 16.03 & 16.04 AND STANDARD No. 401 FOR REFERENCE.

